



FHSCP-UNV3-5W-L-SD-A



Emergency LED Driver

- Emergency LED Driver
- Universal Voltage: 100-347V~
- Output Voltage Range: 12-55V $\overline{\text{DC}}$
- Output Current: 417mA Max
- Output Wattage: 5W
- Output Type: LED Class 2
- Number of Output Channels: 1 Channel
- Dry and Damp Location

General Specifications

Input Voltage / Frequency	100-347V~ , 50/60Hz
Input Current	<0.08A
Input Power	<5W
Standby Power	0.85W
Input Power Pass-Through Rating (AC Driver Line)	5A
Max Output Rating (LED+ LED-	3A, 55V Max
Output Power	5W
Output Voltage Range	12-55V $\overline{\text{DC}}$
Output Current Rated	0.417A Max
Number of Output Channels	1 Channel
Test Switch	Plastic Bi-Color Test Switch(Class 2)
Input Surge Protection	3KV/6KV Ring wave, 1KV/2KV Combine surge
Emergency Mode Protections	Output Open Protection Output Overload Protection Output Short Circuit Protection
RFI/EMI	FCC Part 15 ClassA
Ambient Operating Temperature Range	0°C To 55 °C(32 °F To 131 °F)
Tc	64°C(147.2 °F)
Sound Rating	A
Battery Type	Lithium-Ion battery
Battery Voltage	7.3V
Battery Capacity	2600mAh
Battery Rating	18.98Wh
Battery Recharge Time	24 Hours
Battery Discharge Time	Min 1.5 Hours
IP Rating	IP20
Test Switch Remote Mounting Distance	65.6' (20m) Max.
Battery Connector Mounting Distance	9.84' (3m) Max.
Service Life	50,000 hours
Warranty	5 Years From the date of manufacture when properly installed
Compliance standards	UL 924/UL 1310/CSA C22.2 No.141, CSA C22.2 No.223



FHSCP-UNV3-5W-L-SD-A




RoHS
COMPLIANT



Mechanical Data

Overall Dimensions	
Length	7.68" [195mm]
Width	2.05" [52mm]
Height	1.34" [34mm]

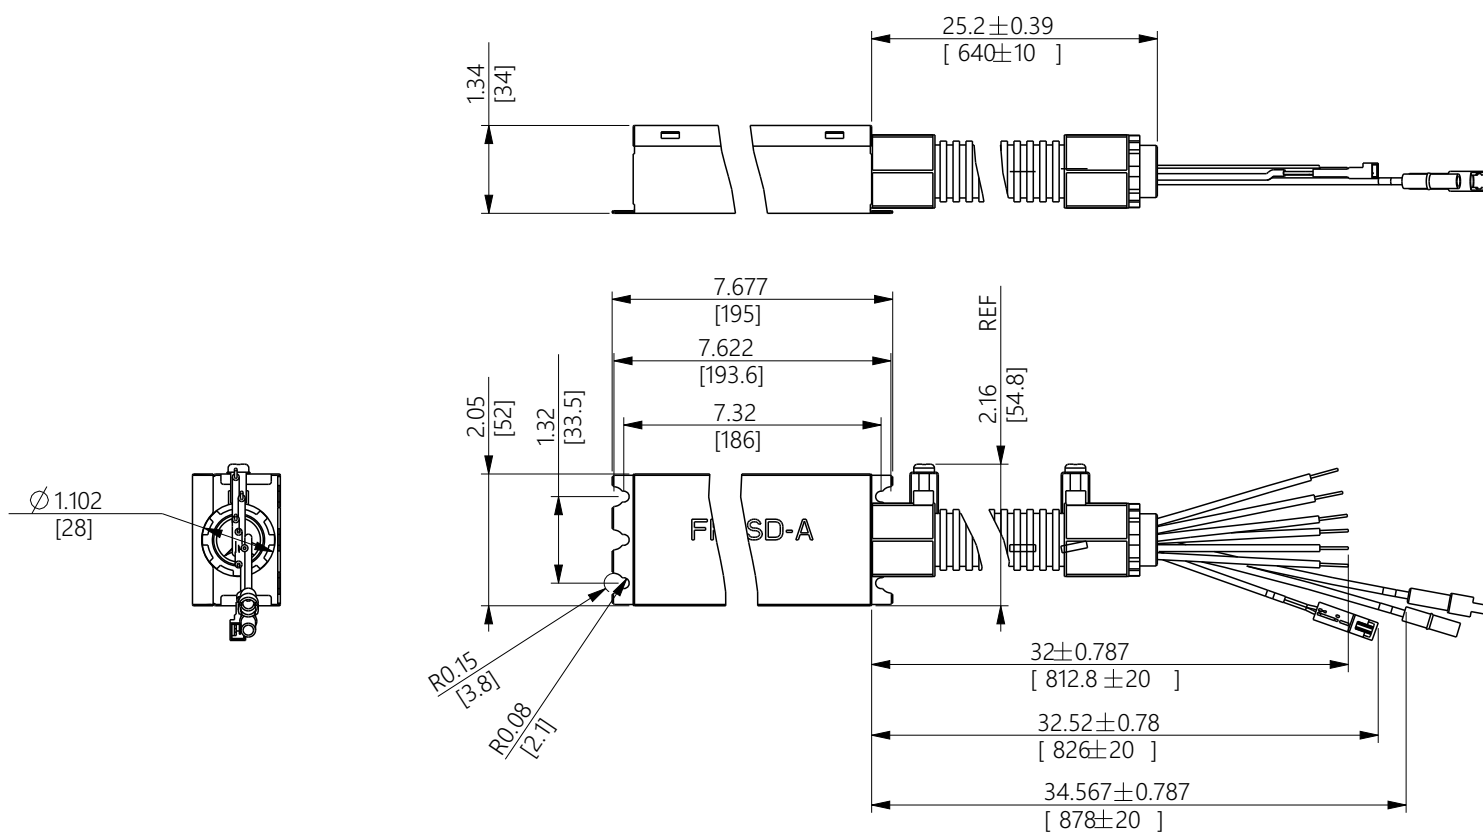

inch
[mm]

Tolerance=0.02"



FHSCP-UNV3-5W-L-SD-A




RoHS
COMPLIANT




Accessories

Test switch wire: FHS-TST-BC

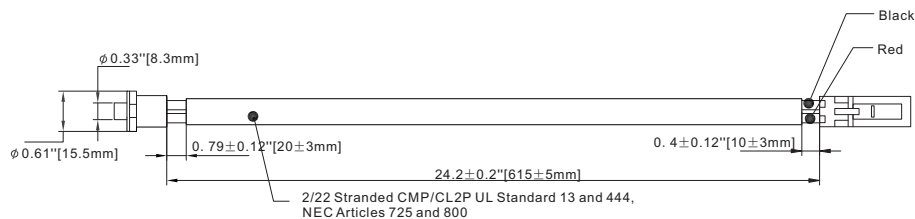


Optional Accessories

Bi-Color Wet Location Test Switch: FHS-TSTWL-BC

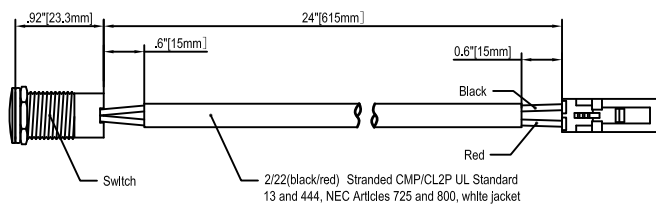


Overall Switch Dimension

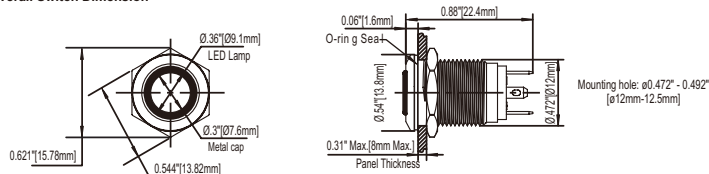

Optional Accessories

White Wet Location Test Switch: FHS-TSTWL-BC-W

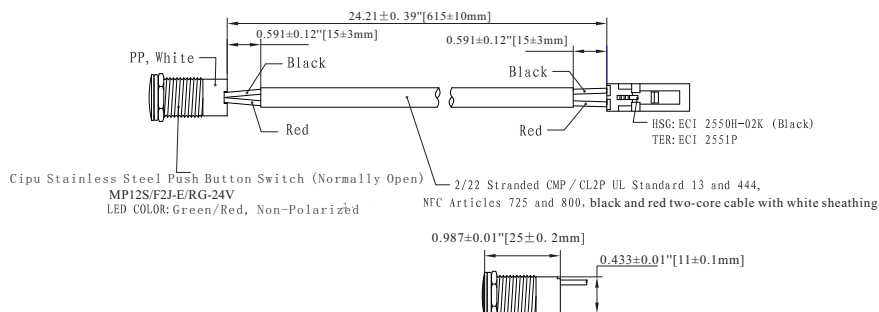



Optional Accessories

Wall Plate: FHSWLPWH




Wall plate and screw color:
white with black lettering

Wall Plate: FHSWLPPWH(Pure White Wall Plate)



Wall plate and screw color:
Pure white with black lettering

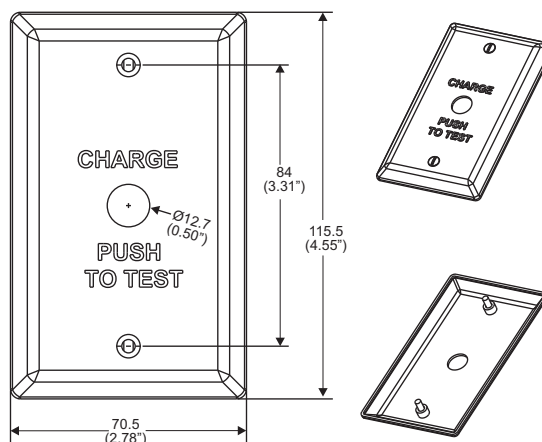


1. "Charge push to Test" plate
2. (2) 6-32 x 1/2" LG mounting screws


FHSCP-UNV3-5W-L-SD-A



Wiring Diagram

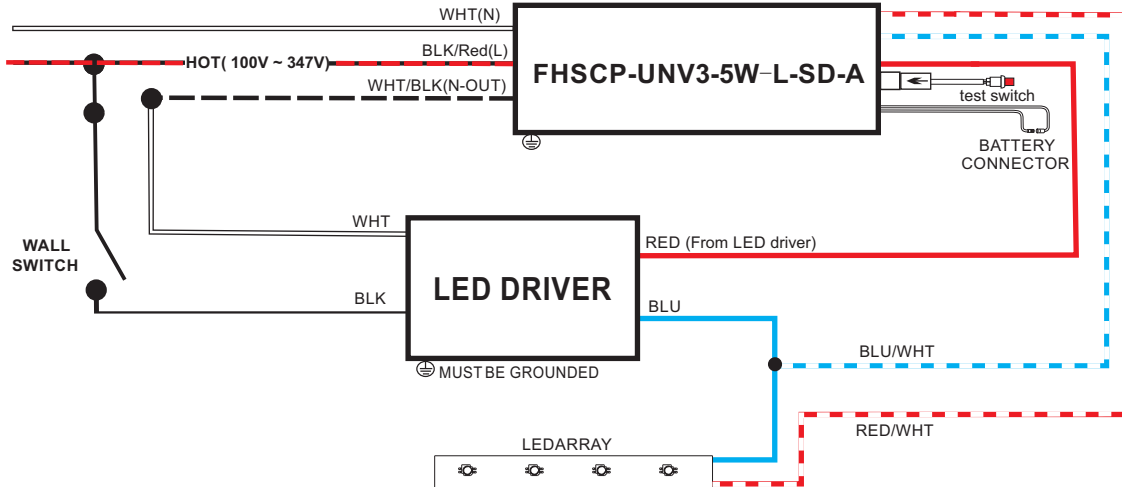

Wiring Diagram (Emergency Only)

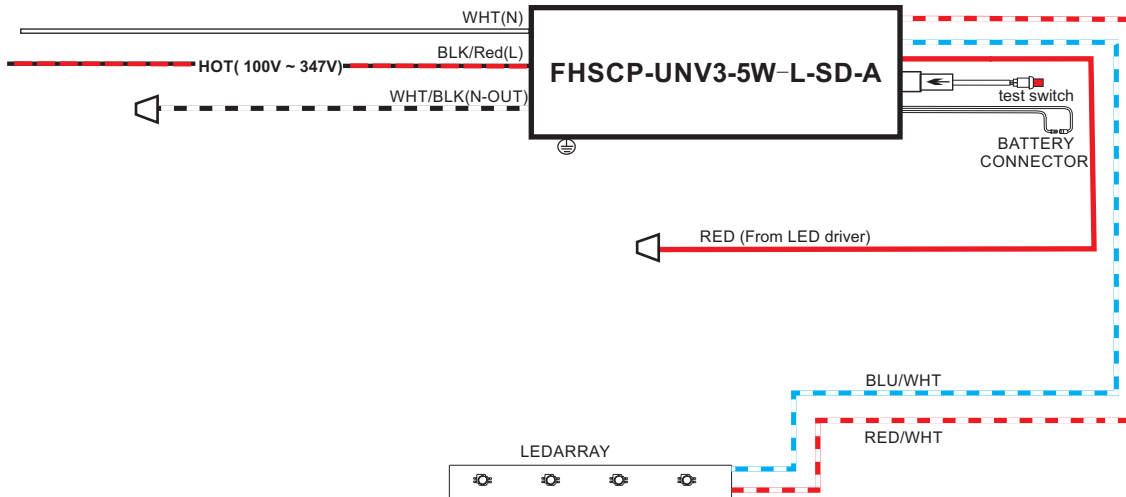



FHSCP-UNV3-5W-L-SD-A



Test Switch Indicator Status:

LED Indicators Status	EM Driver Status / Mode
● Solid Green	System OK / AC OK (Self-Diagnostic Enabled or Disabled)
⦿ Slow Flashing Red, 4s on / 1s off	Battery PACK not found.(Including Self-test/self-diagnostic)
⦿ Flashing Red, 1s on / 1s off	Battery PACK fault. (Including Self-test/self-diagnostic)
⦿ Flashing Green, 1s on / 1s off	Self-Diagnostic test underway
⦿ Slow Flashing Green, 0.1s on / 3s off	Normal working in EM mode. (Including Self-test/self-diagnostic)
⦿ Flashing Red, 4s on / 4s off	No load or output over voltage protection. (Including Self-test/self-diagnostic)
● Slow Red	Over current protection. (Including Self-test/self-diagnostic)
⦿ Flashing Red, 0.5s on / 3s off	Self-diagnose process current fault or Battery voltage <87.5%.
⦿ Flashing Green, 2s on / 0.5s off	Self-Diagnostic Enabled
⦿ Flashing Green, 0.5s on / 2s off	Self-Diagnostic Disabled

TEST SWITCH OPERATIONS

EM Test:

Press and hold the test button (>1s) to enter EM mode in normal AC powered.

Manual Self-Diagnostic:

After charging twelve (12) hours at least, quickly press the test button three(3) times to force the controller to enter Self-Diagnostic cycle.

Query Self-Diagnostic Status:

Fast click 2 times within 2s to query the Self-Diagnostic status. The indicator would blink for current status for 3 cycles. 2s ON/0.5s OFF stands for Enabled. 0.5s ON/2s OFF stands for Disabled.

How to Enable and Disable Self-Diagnostic Status:

Press and hold the test button for one second, then release, and press and hold the test button for 2 seconds.

Cancel reporting error:

In standby, press and hold the button for about 5s to cancel the error indication.

Emergency Battery Disconnect:

Press and hold the test switch for 5 seconds during EM output condition to turn off EM output. This is useful for production environment to turn off the EM output once a luminaire has completed functionality testing.



FHSCP-UNV3-5W-L-SD-A

Guidelines

Grounding

- Driver must be grounded by means of the Driver case.

LED load

- Fulham's Hotspot Constant Power Emergency LED drivers are designed to drive passive LEDs, -COB's and -LED assemblies. Proper function is not guaranteed when (LED) loads with active components are used.

Mounting / Cooling

- Above an output power of 5W, the driver needs to be mounted on a heat conductive surface of at least 40cm². Always test if the surface is sufficient enough before installing the driver.

Short-circuit protection

- In case of a short circuit the LED driver switches to protection mode. After the removal of the short-circuit the LED driver will Latch ,need restart AC Power.

No-load Operation

- In no-load operation the output voltage will not exceed the specified open circuit output voltage.

Hot Swapping

- This driver does not support hot swapping of the LEDs

Battery Maintenance

- In order to maintain proper operation and warranty coverage, the battery must be recharged once per year prior to installation.

Warranty

- Reference Fulham's limited Warranty: <https://cdn.fulham.com/PDFs/Limited-Warranty.pdf>



FHSCP-UNV3-5W-L-SD-A



Part Number Matrix

FHS

LED Driver

FHS = FireHorse HotSpot Driver

CP

Driver Type

CP = Constant Power

UNV3

Input Voltage

UNV3 = 100V-347V

5W

Power

5W = 5 Watts

L

Case Type

L = Long Case

SD

Special Features

SD = Self Diagnostic


A

Special Features

A = Conduit

Product Image: LED Driver

FHSCP-UNV3-5W-L-SD-A

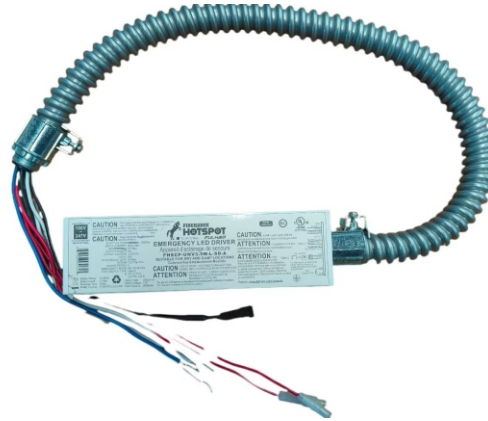

Packaging

Master Carton



OUTER DIMENSION		
L	W	H
474mm(18.66")	384mm(15.12")	333mm(13.11")
Net Weight	Gross Weight	QUANTITY
8.2kg 18.08lb	9.5kg 20.94lb	10